

Here are some suggested ways to load the mini dishwasher. As space is limited, these stacking methods work best.

Please ensure nothing touches or blocks the upper or lower spray arms, as they must rotate freely for the dishwasher to clean properly. Place the detergent in the small compartment inside the door. Knives must be laid flat on the top rack.

Any items that are too large or not dishwasher-safe will need to be washed by hand in the bathroom basin.

Thank you.

