 


Entertainment Guide

COOCAA Smart TV Instructions

Enjoy your favourite movies, shows and videos during your stay.

 
Turning the TV ON / OFF

1. Point the remote towards the TV.
 2. Press the **POWER**  button.
 3. Wait a few seconds for the TV to start.
-

Home Screen

Press the **HOME**  button on the remote.

From the Home Screen you can access:

-  Netflix
-  Disney+
-  Neon
-  YouTube
-  Other available apps

Use the **arrow buttons** on the remote to move around.

Press **OK** to select.

Using Streaming Services

You are welcome to use your own streaming accounts.

To sign in:

1. Open the app you would like to use.
 2. Select **Sign In / Log In**.
 3. Enter your own email and password.
 4. Enjoy your viewing.
-

Watching YouTube

1. Select the **YouTube app**.
2. You can browse without signing in.

If you sign into your Google account, please remember to sign out before leaving.

Adjusting Volume

Use the buttons:

-  **VOL +** = Increase volume
 -  **VOL -** = Decrease volume
 -  **Mute** = Silence sound
-

Before Checking Out

For your privacy, please remember to log out of your accounts.

To sign out:

1. Open the streaming app.
2. Go to **Settings / Help**.
3. Select **Sign Out**.

How to sign out of Netflix:

1. Go right to the top of the page and select your icon on the left-hand side.
 2. Select "get help"
 3. Then scroll down to the bottom & select "sign out"
-

If the TV Is Not Working

Try these quick fixes:

- ✓ Check the TV is switched on
 - ✓ Check the Wi-Fi connection
 - ✓ Press the HOME  button and reopen the app
 - ✓ Turn the TV off, wait 30 seconds, then turn it back on
-

Thank you for staying with us 